



Snap Front Connector-End

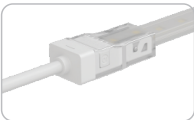


FXN - 156 - C - SN - FE

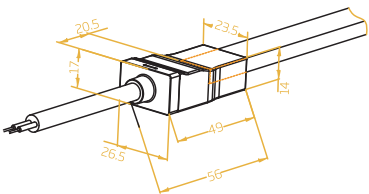

Snap Front Connector-Side




FXN - 156 - C - SN - FS

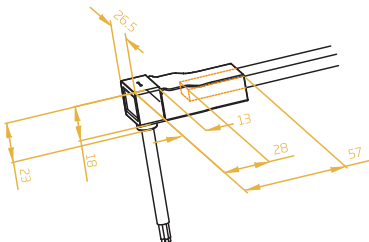

Snap Front Connector-Bottom




FXN - 156 - C - SN - FB

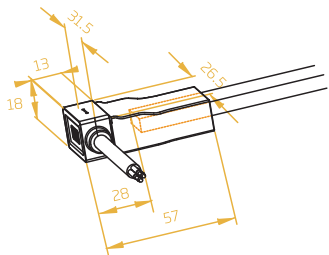


Snap End Cap




FXN - 156 - C - SN - EC

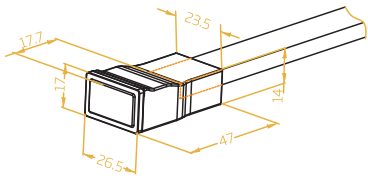

 
Snap Middle Connector / Snap Middle Connector & Power Feed



FXN - 156 - C - SN - MC

 

FXN - 156 - C - SN - MC - PF

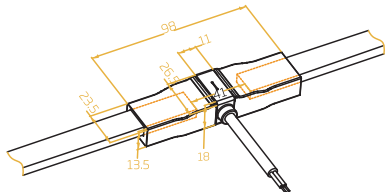


Snap Middle Connector & Power T-feed




FXN - 156 - C - SN - TF

L1 and L2 available in 300mm.
L3 available in 300mm/1000mm/3000mm.

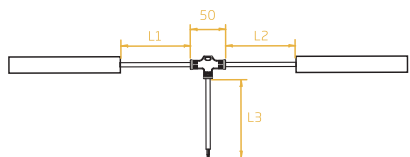


Note:
1. Unless otherwise stated, the tolerance of the connector is $\pm 0.5\text{mm}$.
2. To avoid damage from the excessive force on cable joint, please keep at least 60mm of cable ahead in the natural state.

Anti-wicking Ferrule

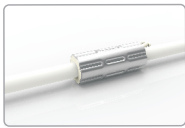

The anti-wicking ferrule is located at 115mm ($\pm 10\text{mm}$ tolerance) from the connector on the cable.

For protection against water ingress from inside of cable wire and hence damage the light.

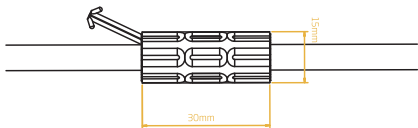

Note:
1. Unless otherwise stated, the tolerance is $\pm 0.5\text{mm}$.
2. The removal of anti-wicking ferrule will void the warranty if any water ingress caused by it.