


FXN 1129 | FLEXIBLE NEON

SURFACE-MOUNTED RACEWAY ALUMINIUM PROFILE


Friendly Reminder – Please read instructions carefully before operation

Step 1

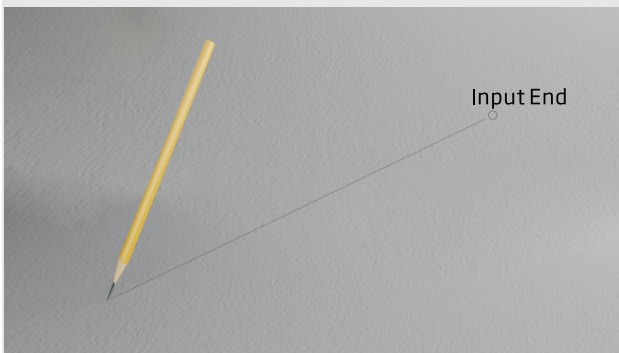


Mark the mounting position and input end.

Step 2

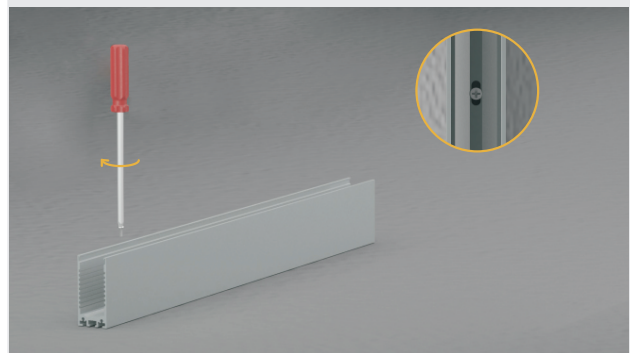


Fix the outer aluminum profile.

Step 3

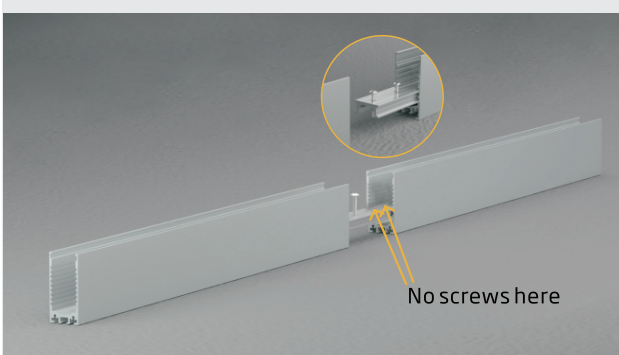


If needed, insert the joining bracket into the bottom slot of outer profiles and centered for the length extension.

Step 4

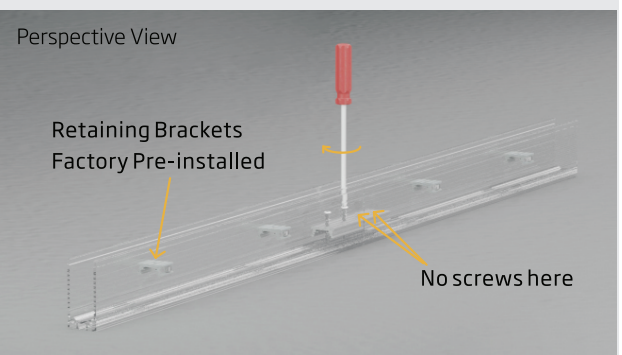


Tighten the screws towards the bottom of outer aluminum profile until locked.

Step 5

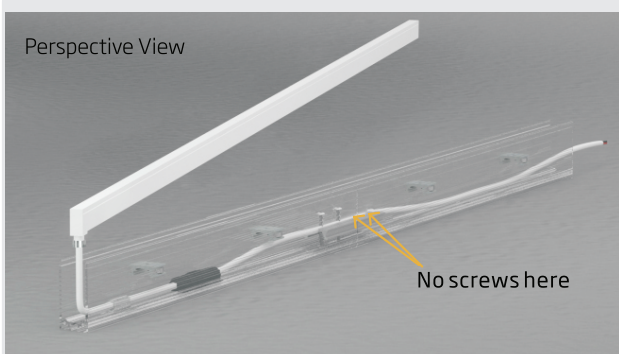

Wiring under the retaining bracket and over the joining bracket .

Step 6

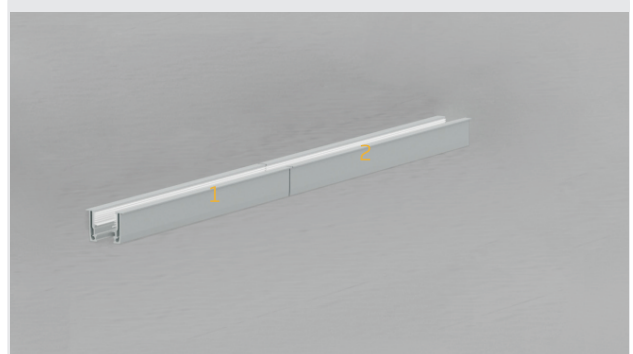


Cut one piece of inner aluminum profile evenly into two segments named 1 & 2 separately.

FXN 1129 | FLEXIBLE NEON

SURFACE-MOUNTED RACEWAY ALUMINIUM PROFILE


Step 7

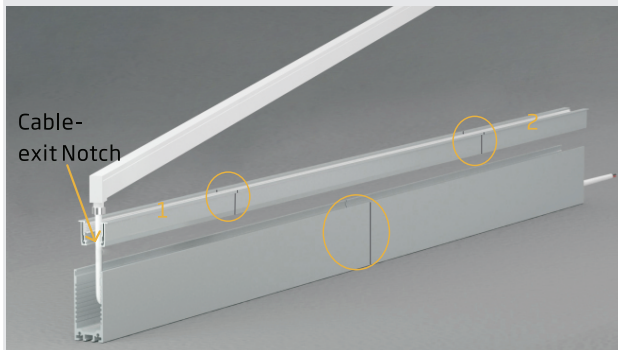

Cable-
exit Notch

Put inner aluminum profiles inside in the rearranged sequence to keep a staggered installation with outer profiles and be aware of the notch direction prior to it.


Step 8

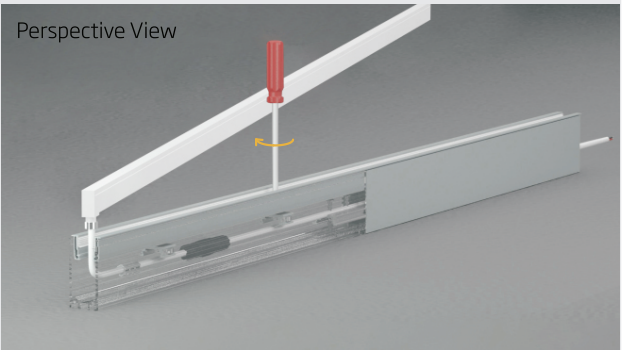

Perspective View

Tighten the screws through retaining bracket to lock the inner aluminum profile.

Step 9

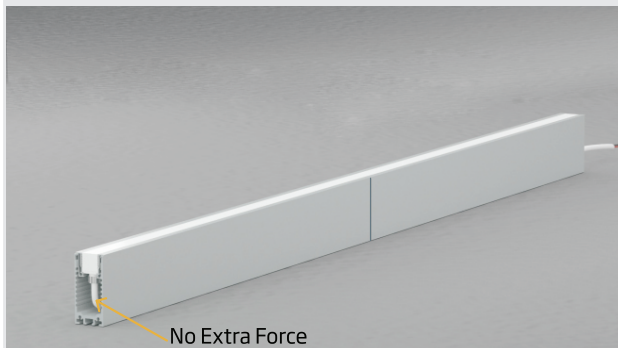

No Extra Force


Fit in the light by palm orderly and tidy the excess cable gently.

Step 10



Seal the front connector by the end cover without cable hole and tighten the screws.

Step 11

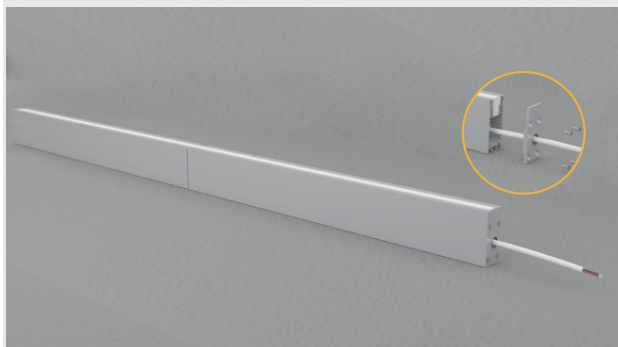

Threading the cable through the hole and seal the other end likewise.