


## FXN 156|FLEXIBLE NEON SURFACE-MOUNTED RACEWAY ALUMINIUM PROFILE


Friendly Reminder – Please read instructions carefully before operation

➤ Step 1

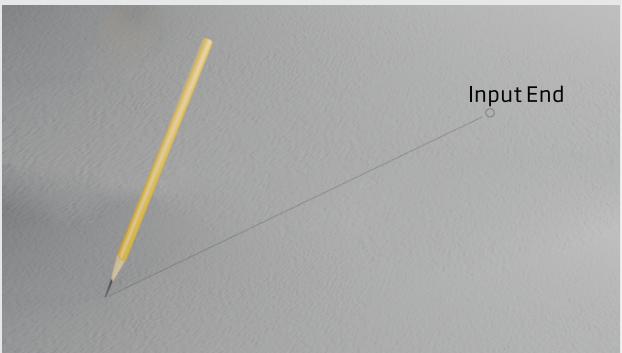


Mark the mounting position and input end.

➤ Step 2

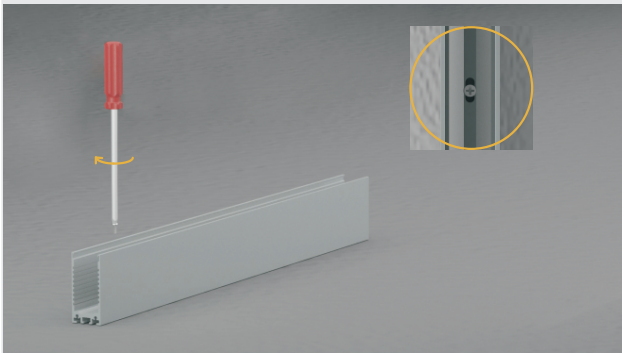


Fix the outer aluminum profile.

➤ Step 3

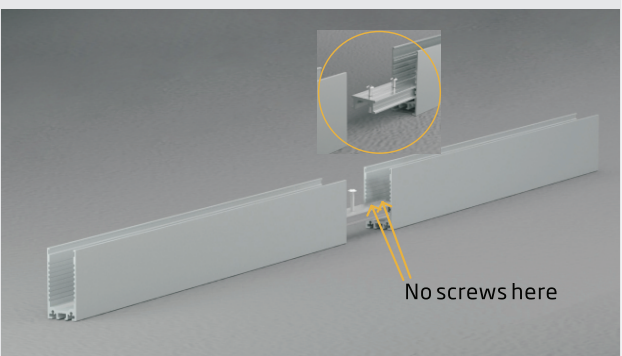


If needed, insert the joining bracket into the bottom slot of outer profiles and centered for the length extension.

➤ Step 4

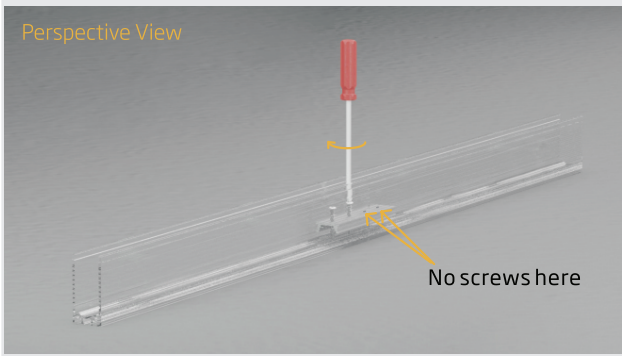


Tighten the screws towards the bottom of outer aluminum profile until locked.

➤ Step 5

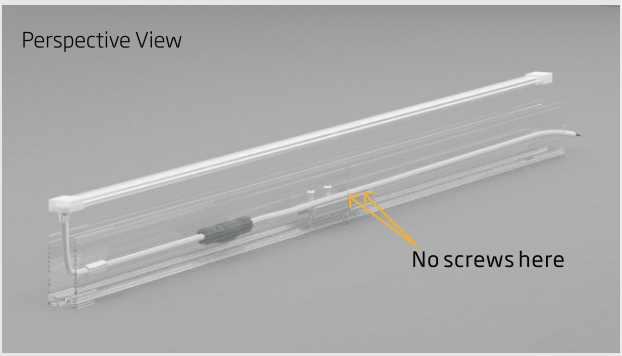

Wiring under the retaining bracket and over the joining bracket .

➤ Step 6

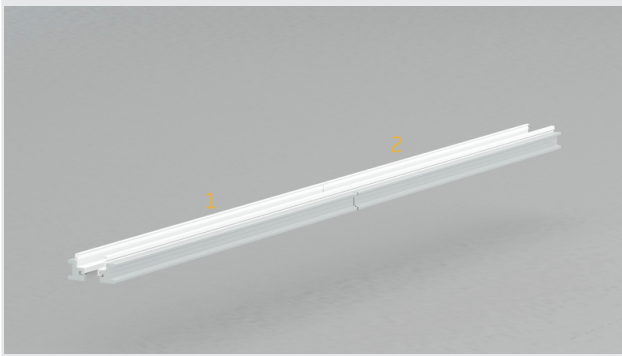


Cut one piece of inner hybrid profile evenly into two segments named 1 & 2 separately.

FXN 156|FLEXIBLE NEON

SURFACE-MOUNTED RACEWAY ALUMINIUM PROFILE


Step 7

Perspective View

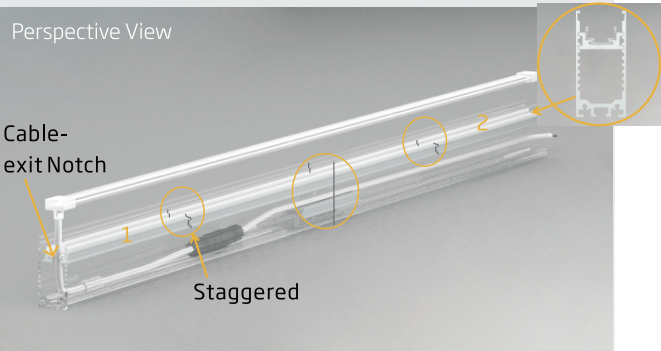


Insert inner hybrid profiles into the slot of outer profiles in the rearranged sequence to keep a staggered installation with outer profiles and be aware of the notch direction before inserting. The deeper inserted, the more uniform lighting effects and less brightness achieved.

Step 8

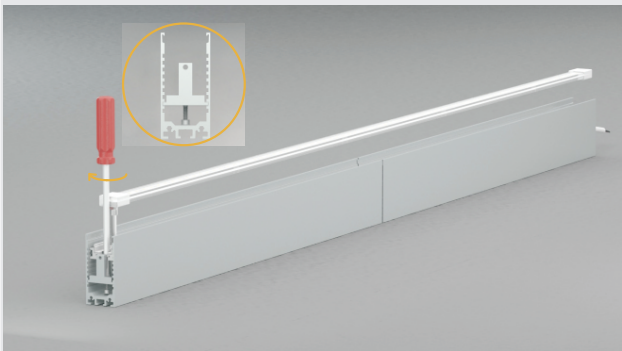


Insert T bracket in the second to last slot of one end of outer profile and align with its edge, and then tighten T bracket by screw towards the bottom of outer profile until locked. Repeat it at the other end.

Step 9

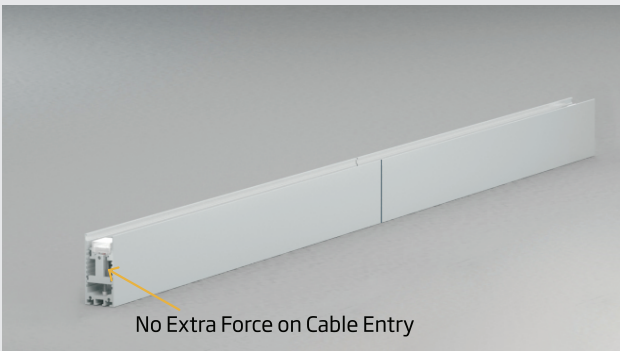


Fit in the light by palm orderly and tidy the excess cable gently.

Step 10

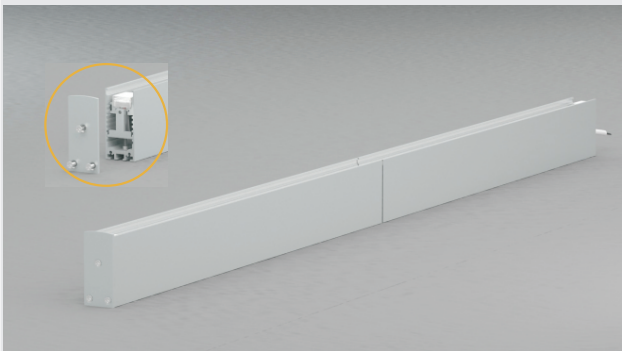


Seal the front connector by the end cover without cable hole and tighten the screws.

Step 11

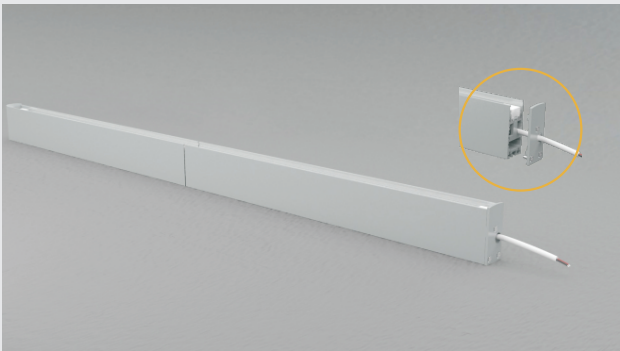

Threading the cable through the hole and seal the other end likewise.

Step 12

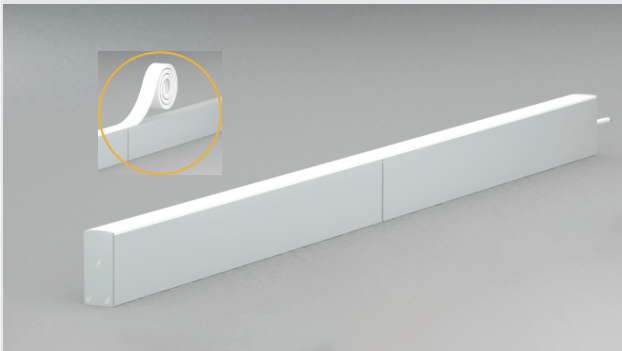

Press the silicone cover into the outer profile from the top orderly.