


FXN 1617 | FLEXIBLE NEON

Surface-mounted Raceway Aluminium Profile


Friendly Reminder – Please read instructions carefully before operation

Step 1

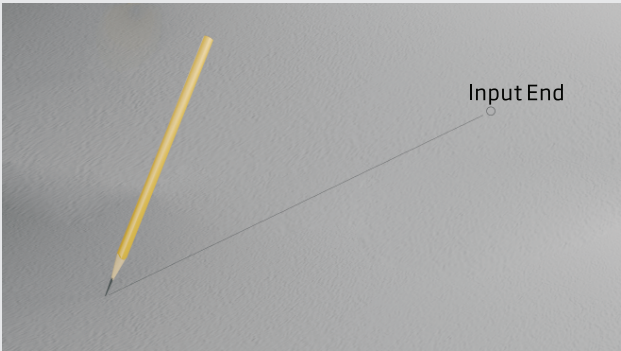


Mark the mounting position and input end.

Step 2

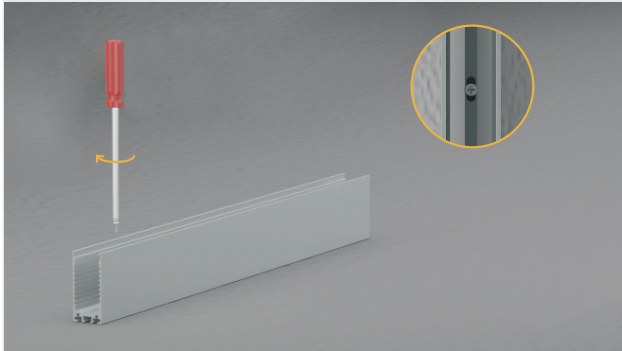


Fix the outer aluminum profile.

Step 3

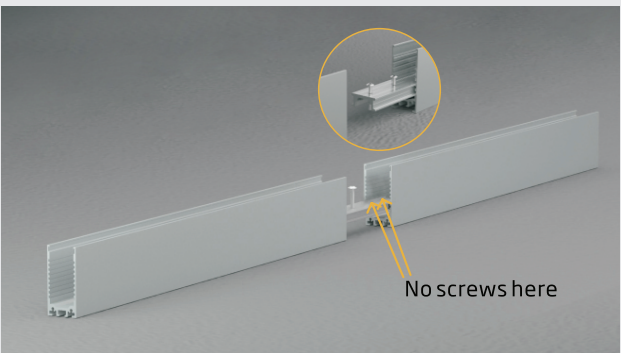


If needed, insert the joining bracket into the bottom slot of outer profiles and centered for the length extension.

Step 4

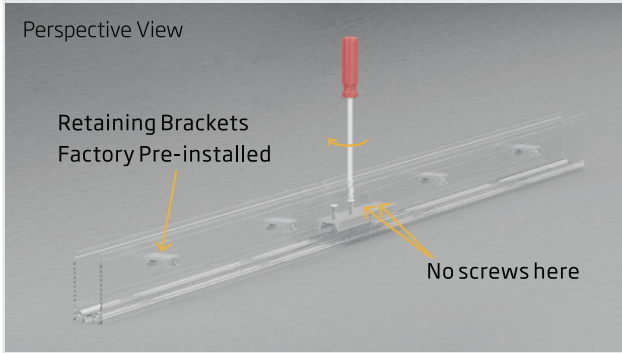


Tighten the screws towards the bottom of outer aluminum profile until locked.

Step 5

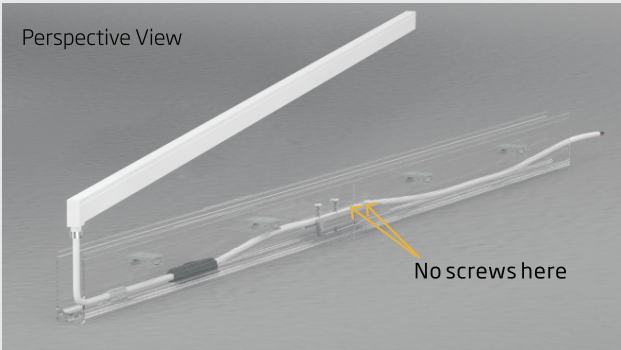

Wiring under the retaining bracket and over the joining bracket.

Step 6

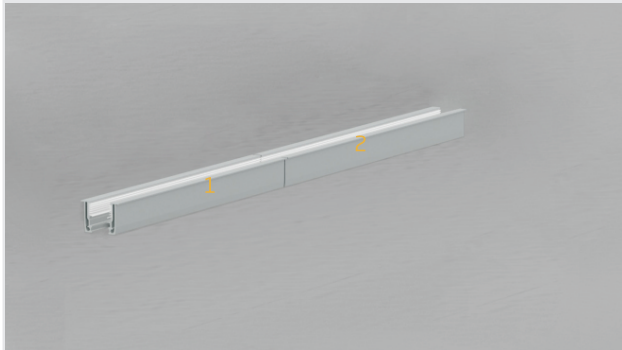


Cut one piece of inner aluminum profile evenly into two segments named 1 & 2 separately.

FXN 1617 | FLEXIBLE NEON


Surface-mounted Raceway Aluminium Profile

➤ Step 7

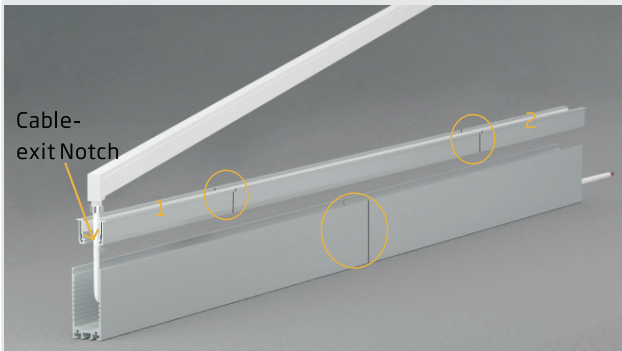


Put inner aluminum profiles inside in the rearranged sequence to keep a staggered installation with outer profiles and be aware of the notch direction prior to it.

➤ Step 8

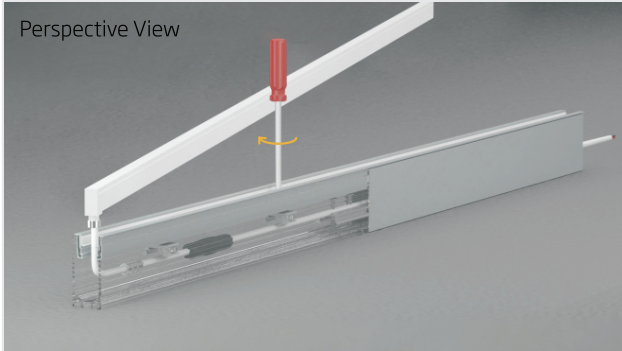

Tighten the screws through retaining bracket to lock the inner aluminum profile.

➤ Step 9

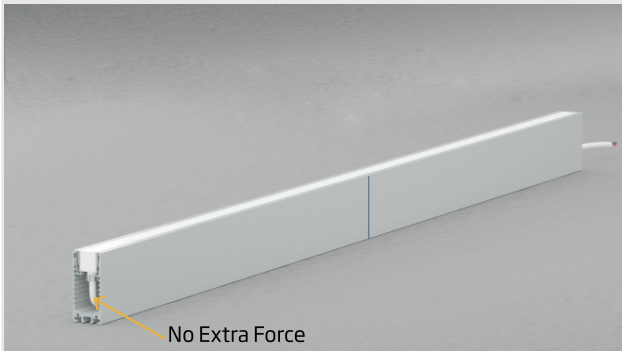


Fit in the light by palm orderly and tidy the excess cable gently.

➤ Step 10



Seal the front connector by the end cover without cable hole and tighten the screws.

➤ Step 11

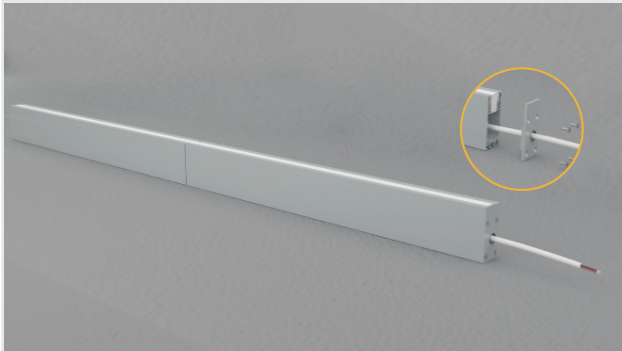

Threading the cable through the hole and seal the other end likewise.