


FXN 1617 | FLEXIBLE NEON

Suspended Raceway Aluminium Profile

Friendly Reminder – Please read instructions carefully before operation


➤ Step 1

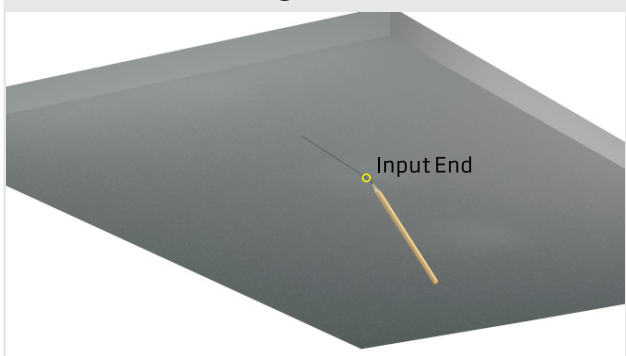

Input End


Mark the mounting position and input end on the ceiling with sufficient load-carrying capacity.

➤ Step 2

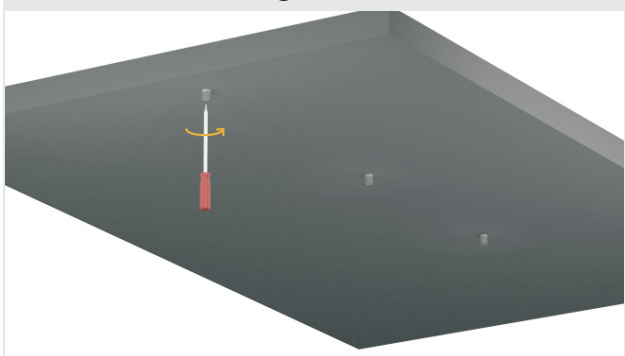

Mount the outer part of cable couplers to the ceiling and tightened by screws.

➤ Step 3

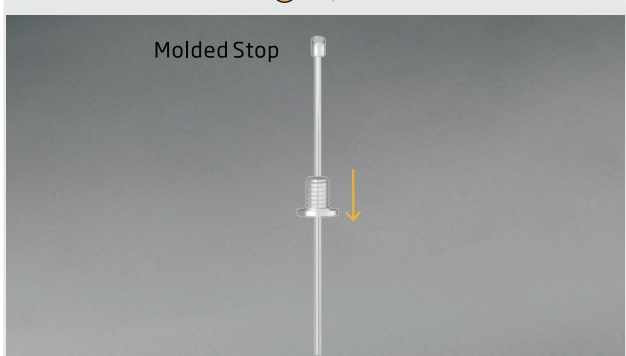

Molded Stop

Thread steel wire through the inner part of cable coupler and its molded stop will prevent the wire from falling out.


➤ Step 4



1 Unscrew 2 Push In


Unscrew the coupling nut on the top of cable gripper and then push in the plunger to allow the other end of steel wire to thread through the keyhole of cable gripper.

➤ Step 5

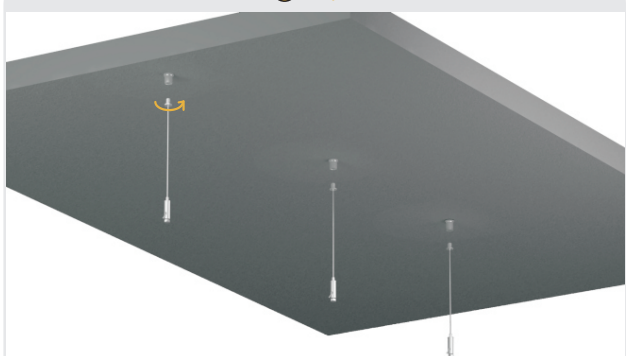

Tighten the assembled cable grippers to the mounted outer part of cable couplers.

➤ Step 6

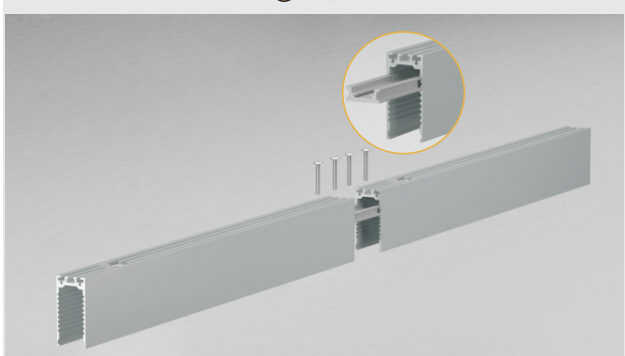

If needed, insert the joining bracket into the bottom slot of outer profiles and centered for the length extension.

FXN 1617 | FLEXIBLE NEON
Suspended Raceway Aluminium Profile

Step 7

Perspective View

Retaining Brackets
Factory Pre-installed

Tighten the screws going through the holes of joining bracket and outer aluminum profiles

Step 8

Perspective View

Wiring under the retaining brackets and over the joining bracket, and then thread the cable through the cable hole of outer aluminum profile.

Step 9



Cut one piece of inner aluminum profile evenly into two segments named 1 & 2 separately.

Step 10

Cable-
exit Notch

Put inner aluminum profiles inside in the rearranged sequence to keep a staggered installation with outer profiles and be aware of the notch direction prior to it.

Step 11

Perspective View

Tighten the screws through retaining brackets to lock the inner aluminum profile.

Step 12


No Extra Force

Fit in the light by palm orderly and tidy the excess cable gently.

FXN 1617 | FLEXIBLE NEON


Suspended Raceway Aluminium Profile

➤ Step 13

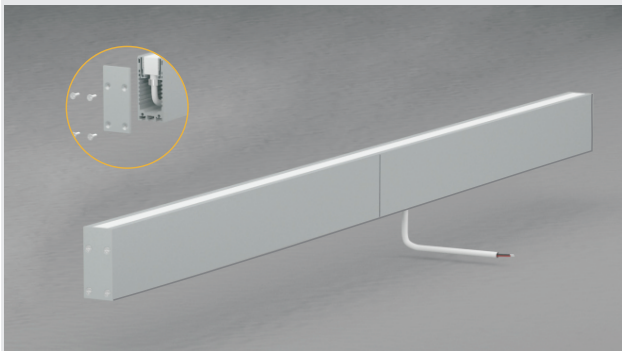

Seal both ends by the end covers and tighten the screws.

➤ Step 14

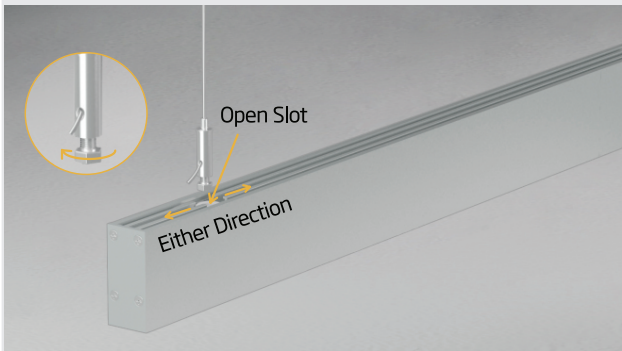


Flip the outer aluminum profiles. Then unscrew the hex bolt of cable gripper and slide it in from the open slots where rubber grommets lay.

➤ Step 15



Tighten the bushings of cable grippers with the hex bolts.

➤ Step 16

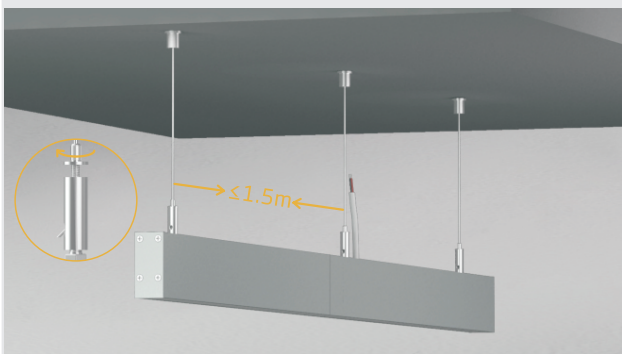

Adjust the position of cable grippers and the length of steel wires to the desired ones , and remain all of the steel wires hanging vertically. Tighten the coupling nut the and cut or roll up the excess steel wire at last.